

Upgrade via SD-Card.

To be able to upgrade via SD-Card the EasySplicer needs to have a firmware installed with a version number greater than V3.00.00 If not continue to the next page and upgrade via USB.

1. Unpack the firmware.zip file. Inside \firmware You will find fw.hex file.
2. Copy the file fw.hex to a FAT32 formatted SD-Card (MAX 32GB) (standard format of a new SD-Card).
3. Insert SD-Card into the EasySplicer.
4. Connect the charger.
5. Answer YES when asked if You want to install this firmware.
6. Wait for the upgrade to finish. It will take about half a minute.
7. Remove SD-Card and charger.
8. Done