


Manual

HT332 - Rotary Coaxial Cable Stripper

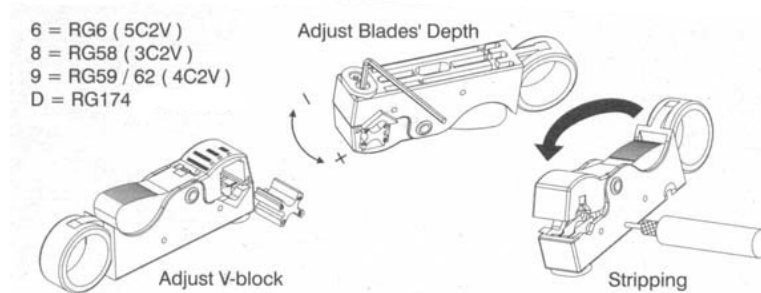

INSTRUCTIONS

Stripping length: This stripper can strip cable in four lengths 4, 6, 8 and 12 mm. The stripping length is pre-set to 6mm. If you want to strip other lengths, you may adjust the blade's position.


Blades' Depth: You may use the hex wrench, which is installed, on the bottom of the tool to adjust the blades' depth. Insert the hex wrench into the blade depth adjuster on the bottom of the stripper, then rotate the hex wrench clockwise (to cut small cable) or counter-clockwise (to cut larger cable). Repeat these steps to set the other blade.

Stripping Cable:

1. The V-block is reversible. Use the hex wrench to push the V-block out of the housing, align the character on the V-block with the arrow, and then insert the V-block into its housing. The indicated arrow recommended the RG cable size mark in front of the V-block. 6=RG6 (5C2V), 8=RG58 (3C2V), 9=RG59/62, D=RG-174.
2. Press the knurled portion on the upper jaw to open the stripper's jaws.
3. Insert the cable you want to strip through the V-block until the cable reaches the V-shaped cable guide. Then release the upper jaw to close the jaws.
4. Insert your index finger into the stripper's finger ring, turn the stripper clockwise 1-4 times. The cable's insulation is cut while you turn the stripper.
5. Open the jaws and remove the cable. Pull away the outer jacket and dielectric to expose the inner conductor.

Stripping Distance:

2 Blades Model (332 Series)

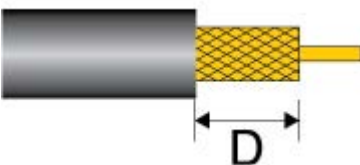

D= 4, 6, 8, 12 mm