


PCT-AIO-CT Compression Tool

Instruction Sheet



A. PUSH BUTTON USE (DRS/TRS)

Push button towards back or towards front for selection between compression lengths.

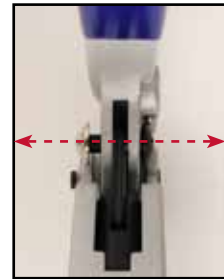

www.pctinternational.com

B. RG-6, RG-59 “F” CONNECTORS

Lift top gate and insert connector.
Close top gate.
Close handle to compress.



C. RG-7, RG-11, and 320QR CONNECTORS

Swing the 6/59 gate out to the side of the tool.
Open the 7/11 top gate and insert connector.
Close top gate, then close handle to compress.



D. RCA, BNC, IEC, and TRS-RA (Right Angle) CONNECTORS

Remove mandrel piece from plunger.
Lift top gate and insert connector.
Close top gate, then close handle to compress.

