

**FENGER®**

## INSTALLATION & CONFIGURATION MANUAL

# FDH7110

(8 HD to IP Encoder)



# Preface

Thank you for choosing our product.

This manual details the performance, installation and operation of the product. Please read this manual before use.

Our company does not assume any responsibility for any losses caused by violation of safety regulations.

## 1. Incoming inspection

- (1) Open the equipment box and check the contents against the product packing list.
- (2) If the packing list does not match the actual item, please contact us.

## 2. Read the instruction manual

Please read the instructions and follow all instructions.

### (1) Power

The power supply used with this device must comply with the indicated power supply and be grounded. When not using the machine for a long time, please unplug the power cord.

### (2) Working environment

Keep the equipment working in a ventilated and dry place. Avoid excessive heat, moisture, dust and heat.

### (3) Equipment cleaning

Before cleaning the device, unplug the power cord. Do not use liquid or spray cleaners.

### (4) Power cable protection

Pay special attention to the safety protection of plugs, sockets and power cords.

**(5) Overload**

Be careful not to overload the power supply at the outlet. Use caution when using extension cords or integrated sockets as this may result in electric shock and fire.

**(6) Lightning**

To prevent damage caused by lightning, please use this device in a lightning protection device, which can effectively prevent damage caused by lightning or power grid fluctuations.

**(7) Foreign matter or liquid intrusion**

Do not insert foreign objects into the machine or spill any liquid into the machine.

**(8) Attachments**

Do not use accessories not recommended by the manufacturer, as this may cause danger.

**(9) Transportation**

When transporting the machine, the original packaging of the product should be used to avoid damage. Do not place heavy objects on the machine or step on it. Otherwise, personal injury may occur and the machine may be damaged.

**(10) Maintenance**

Do not open the box and repair by yourself to avoid personal injury or serious damage to the machine.

During the warranty period, if the product is damaged due to natural causes and is disassembled without authorization, free warranty will not be provided.

# Content

1. Product description .....	6
1.1. Overview.....	6
1.2. Picture.....	6
1.3. Parameters.....	7
1.4. Features.....	7
2. Structure diagram .....	8
2.1. Front panel .....	8
2.2. Rear panel.....	9
3. Installation guide.....	9
3.1. Preparation.....	9
3.2. Equipment installation process.....	10
3.3. Environmental conditions requirements .....	10
3.4. Grounding requirements.....	11
3.4.1. Cabinet grounding.....	11
4. Built-in web management terminal operation.....	12
4.1. Preparation.....	12
4.2. Login.....	12
4.3. Device .....	13

4.4. Input .....	14
4.5. Router .....	15
4.6. Output .....	16
4.7. System .....	16
4.7.1. Basic parameters .....	17
4.7.2. Network .....	17
4.7.3. Account .....	18
4.7.4. System parameters .....	19
4.7.5. Time and Date .....	20
4.7.6. Cloud .....	21
5. Equipment operation precautions .....	22
5.1. Precautions .....	22
5.2. The chassis needs to be unplugged from the power supply .....	22
5.3. Common malfunctions .....	23

## 1. Product description

### 1.1. Overview

The FENGER® FDH7110 is a highly integrated platform engineered for centralized processing of HD front-end services. Designed for versatility, it supports both desktop installation and standard rack mounting, making it adaptable to a wide range of deployment environments.

Configuration and management can be performed locally or remotely through cloud-based network access, ensuring efficient and flexible operation. Its intuitive web interface features a clean, user-friendly design that simplifies setup, monitoring, and daily management.

Combining high integration with exceptional cost performance, the FDH7110 delivers a reliable and comprehensive signal processing solution for modern IPTV systems.

### 1.2. Picture

#### Front panel



#### Rear panel



### 1.3. Parameters

FDH7110 Base unit parameter		
<b>Size</b>	318(L) x 260(W) x 44(H) mm	
<b>Installation form</b>	1U 19-inch chassis, Desktop	
<b>Working temperature, humidity</b>	5°C ~ 45°C, 40% ~ 70%	
<b>Storage temperature and humidity</b>	-10°C ~ 70°C, 40% ~ 95%	
<b>Power parameters</b>	<b>Supply voltage</b>	DC12V
	<b>Maximum current</b>	7000mA
<b>Connector parameter of input module</b>	<b>Total number of slots</b>	2
	<b>Each slot can support modules</b>	4 HD encoding module
<b>IP output parameter</b>	<b>IP output connector</b>	1 Gigabit RJ45 network port
	<b>Output format</b>	Supports UDP/RTP protocol output. Supports output IP stream in SPTS with 8 IP addresses.

\*Specifications subject to change without prior notice

### 1.4. Features

- Card design, 2 cards with 8 HD inputs
- Video encoding in H.264 and audio encoding in MPEG and AAC
- Supports all major resolutions from 480i through 1080p60
- Offers 8 IP output addresses in SPTS
- 1 × Gigabit Ethernet (Data) port & 1 × Management port
- Graphical Web UI for fast and easy configuration
- 19" rack-mount installation, with mounting brackets included

## 2. Structure diagram

### 2.1. Front panel



Number	Function	
1	PER	This indicator light lights up when the device is powered on.
	RUN	This indicator light lights up when the device is running.
2	CH1	When the No. 1 port receives the signal, the indicator light lights up.
	CH2	When the No. 2 port receives the signal, the indicator light lights up.
	CH3	When the No. 3 port receives the signal, the indicator light lights up.
	CH4	When the No. 4 port receives the signal, the indicator light lights up.
	CH5	When the No. 5 port receives the signal, the indicator light lights up.
	CH6	When the No. 6 port receives the signal, the indicator light lights up.
	CH7	When the No. 7 port receives the signal, the indicator light lights up.
	CH8	When the No. 8 port receives the signal, the indicator light lights up.
3	DATA OUT	Gigabit output network port.
4	NMS	Management.
5	DEFAULT	Restore factory settings button. If you need to restore factory settings, you need to press and hold for 15 seconds.

## 2.2. Rear panel



Number	Function	
1	CH1	Signal input connector.
	CH2	Signal input connector.
	CH3	Signal input connector.
	CH4	Signal input connector.
2	CH1	Signal input connector.
	CH2	Signal input connector.
	CH3	Signal input connector.
	CH4	Signal input connector.
3	Switch.	
4	Ground.	
5	Power inlet.	

## 3. Installation guide

### 3.1. Preparation

When installing the device, follow these steps:

- Check for possible loss or damage of equipment during transportation.
- Prepare a suitable environment for installation.
- Install the required input and output cables.

Each detail of the equipment installation is described in the remainder of this chapter, using the rear panel diagram as a reference for specific locations.

### 3.2. Equipment installation process

Step 1: Unpacking and inspecting goods

Step 2: Fixed equipment

Step 3: Connect power and ground wires

Step 4: Connect signal cable

Step 5: Set device parameters

Step 6: Equipment operation

### 3.3. Environmental conditions requirements

Project	Requirement
Control room space	When installing multiple rows of cabinets, the distance between the front and rear doors of the cabinet is 1.2~1.5m and the distance from the wall is 0.8m.
Control room floor	Non-conductive and dust-free. The volume resistivity of the ground anti-static material is $1\times 10^7\sim 1\times 10^{10}$ , and the grounding current limiting resistance is 1M. The floor load-bearing should be greater than $450\text{Kg/m}^2$ .
Ambient temperature	For long-term work in an environment of 5~40°C, and for short-term work in an environment of 0~45°C, it is best to install air conditioners in places to facilitate heat dissipation.
Relative humidity	Work long-term in the 20% to 95% environment and short-term in the 10% to 97% environment.
Ambient air pressure	86kPa~106kPa.
Windows	Dust-proof rubber strips must be added for sealing. It is recommended that windows be installed with double-glazing and strictly sealed.
Wall	Wallpaper can be applied or matte paint can be applied, but paint that is easily powdered should not be applied.
Fire protection requirements	The control room should be equipped with an automatic fire alarm system and a portable fixed fire extinguishing system.

Power requirements	Three independent power supply systems are required for equipment power supply, air conditioning power supply, and lighting power supply. The equipment is powered by AC power supply. The AC power supply adopts $220V \pm 20\%$ 50/60Hz. Please check carefully before operating the equipment.
--------------------	---

## 3.4 Grounding requirements

- The good ground wire design of each functional module is the basis for the stable and reliable operation of the whole machine, and is the primary guarantee for lightning protection and anti-interference. Therefore, system grounding must follow the following principles.
- The ground conductor must use copper conductor to reduce high-frequency impedance, and the ground wire should be as thick and short as possible.
- The connection points at both ends of the grounding wire should be confirmed to have good electrical contact and should be treated with anti-corrosion treatment.
- It is strictly prohibited to use other equipment as part of the electrical connection of the ground wire.
- The cross-sectional area of the ground wire connecting the cabinet to the lightning protection unit must be greater than or equal to  $25mm^2$ .

### 3.4.1. Cabinet grounding

The ground terminals of each cabinet in the same computer room should be connected to the protective ground copper bar provided by the control room. The grounding wire is required to be as short as possible. If the wiring is too long during project installation, it should be cut off to avoid coiling of the grounding wire. The cross-sectional area of the conductor from the ground terminal to the ground bar must be greater than or equal to  $25mm^2$ .

## 4. Built-in web management terminal operation

### 4.1. Preparation

- The NMS network port of the device is connected to the PC network port.
- Power the equipment.

### 4.2. Login

- You can check the IP address of the device through the operation panel.
- Open IE browser / Firefox browser / Google Chrome / Opera browser, enter the device IP address in the address bar (generally default: **192.168.1.30**), and after confirmation, the login interface will be displayed as follows:
- Enter username and password, the default is: **user**
- Click to log in




Notice:

1. If the connection cannot be made, please check whether the PC and the device are on the same network segment. If not, please add a new network segment in the advanced TCP/IP settings of the PC. For example: the PC's IP address is 192.168.99.252, which can be changed to 192.168.1.xxx (xxx can be any value from "1" to "254" except "252" to avoid IP conflicts).

2. If you still cannot connect after the above operations, or you forgot to log in to the IP address, please operate the front panel of the device to restore the factory default values.
3. If you need to change the language, please change it in the upper right corner of the page. Select ENGLISH/CHINESE.


### 4.3. Device

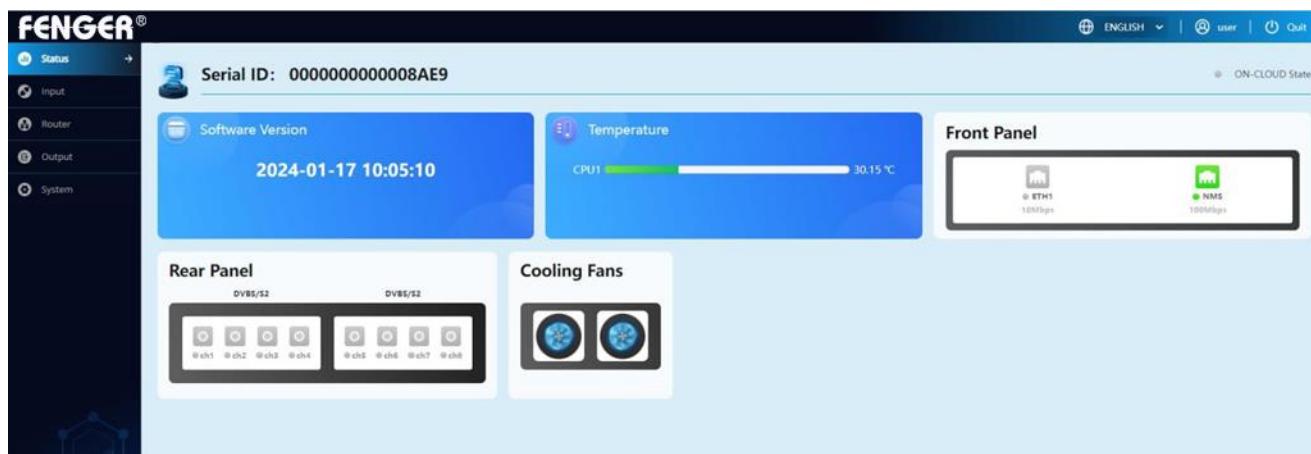

Serial ID	Display device serial number.
Software version	Display the current software version number of the device.
Temperature	Display the temperature of the device's core board, and display the number of temperature progress bars based on the number of core boards.
Rear panel	Display the current access status of the rear panel. Green: connected; gray: not connected.
Fans	Display the operating status of the fans in the device. Under normal conditions, all fans will rotate. Blue: running; black: stopped; the fan stops running and a yellow triangle warning appears⚠

Frontal panel	Display the current access status of the front panel. Green: connected; gray: not connected.
Language settings	ENGLISH/CHINESE
User name	Display the user name currently logged in to the device backend.
Quit	Exit the device background management terminal.
Cloud network Management binding status	Display the binding status of the device on cloud. Green: bound; gray: unbound.

## 4.4 Input

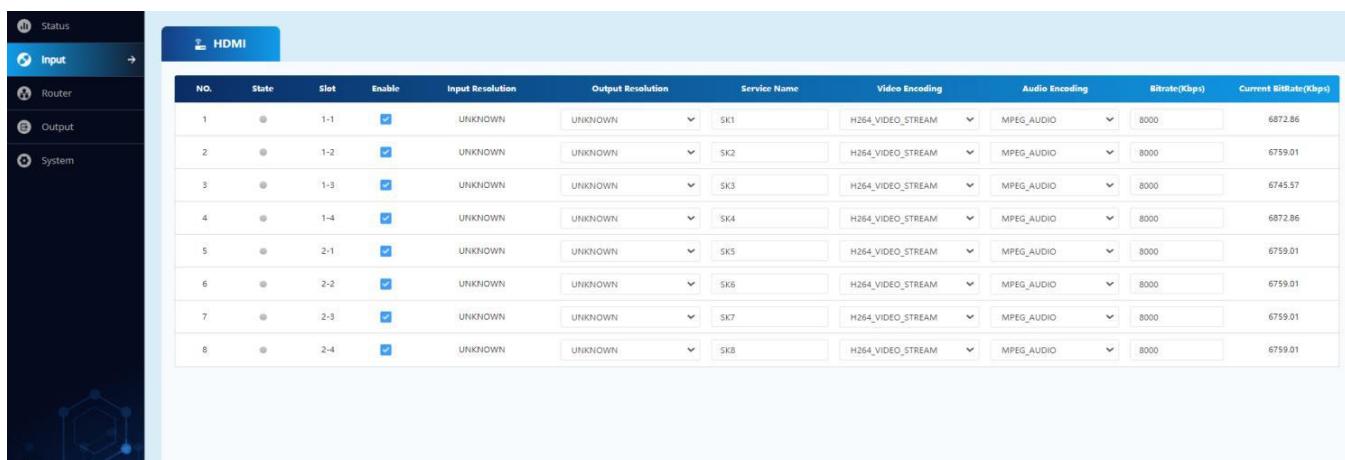


HDMI											
NO.	State	Slot	Enable	Input Resolution	Output Resolution	Service Name	Video Encoding	Audio Encoding	Bitrate(Kbps)	Current BitRate(Kbps)	
1	●	1-1	<input checked="" type="checkbox"/>	UNKNOWN	UNKNOWN	SK1	H264_VIDEO_STREAM	MPEG_AUDIO	8000	6872.86	
2	●	1-2	<input checked="" type="checkbox"/>	UNKNOWN	UNKNOWN	SK2	H264_VIDEO_STREAM	MPEG_AUDIO	8000	6759.01	
3	●	1-3	<input checked="" type="checkbox"/>	UNKNOWN	UNKNOWN	SK3	H264_VIDEO_STREAM	MPEG_AUDIO	8000	6745.57	
4	●	1-4	<input checked="" type="checkbox"/>	UNKNOWN	UNKNOWN	SK4	H264_VIDEO_STREAM	MPEG_AUDIO	8000	6872.86	
5	●	2-1	<input checked="" type="checkbox"/>	UNKNOWN	UNKNOWN	SK5	H264_VIDEO_STREAM	MPEG_AUDIO	8000	6759.01	
6	●	2-2	<input checked="" type="checkbox"/>	UNKNOWN	UNKNOWN	SK6	H264_VIDEO_STREAM	MPEG_AUDIO	8000	6759.01	
7	●	2-3	<input checked="" type="checkbox"/>	UNKNOWN	UNKNOWN	SK7	H264_VIDEO_STREAM	MPEG_AUDIO	8000	6759.01	
8	●	2-4	<input checked="" type="checkbox"/>	UNKNOWN	UNKNOWN	SK8	H264_VIDEO_STREAM	MPEG_AUDIO	8000	6759.01	

Serial number	Display the serial number of the channel number to visually display the number of channels.
Status	Display the signal status of the channel. - Gray: The signal is not connected - Green: The signal is locked and analyzed successfully
Channel	Display the card and corresponding channel number. For example: 1-1 represents the first channel of card 1.
Enable	Control whether the channel signal is turned on or off.
Input resolution	Display the resolution of the input signal source.

Output resolution	Set the resolution of the output signal. 1920x1080 30P or 1280x720 60P.
Service name	Set the service name, up to 31 bytes.
Video format	Default H264 Video Stream.
Audio format	MPEG Audio or AAC.
Set encoding bitrate	The value range is 2000-19000. The higher the bit rate, the higher the definition, which is related to the input resolution.
Current encoding bitrate	Show the actual encoding bit rate.
Timeout	Set the automatic refresh time of table data, the value range is 1-30s.


## 4.5. Router

In routing management, we can analyze and forward programs.

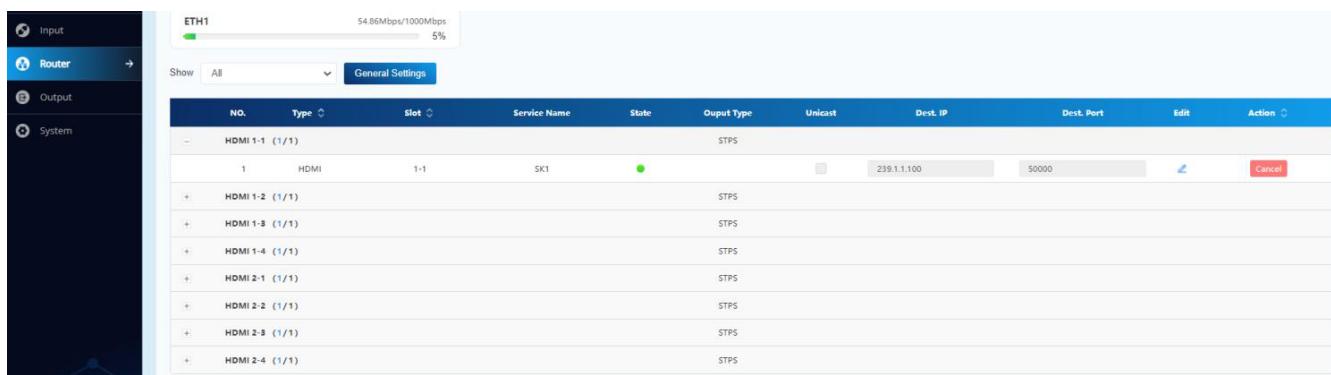

## 4.6. Output

The output management interface mainly displays the forwarded programs, and can download the program list and export it to the IPTV server.

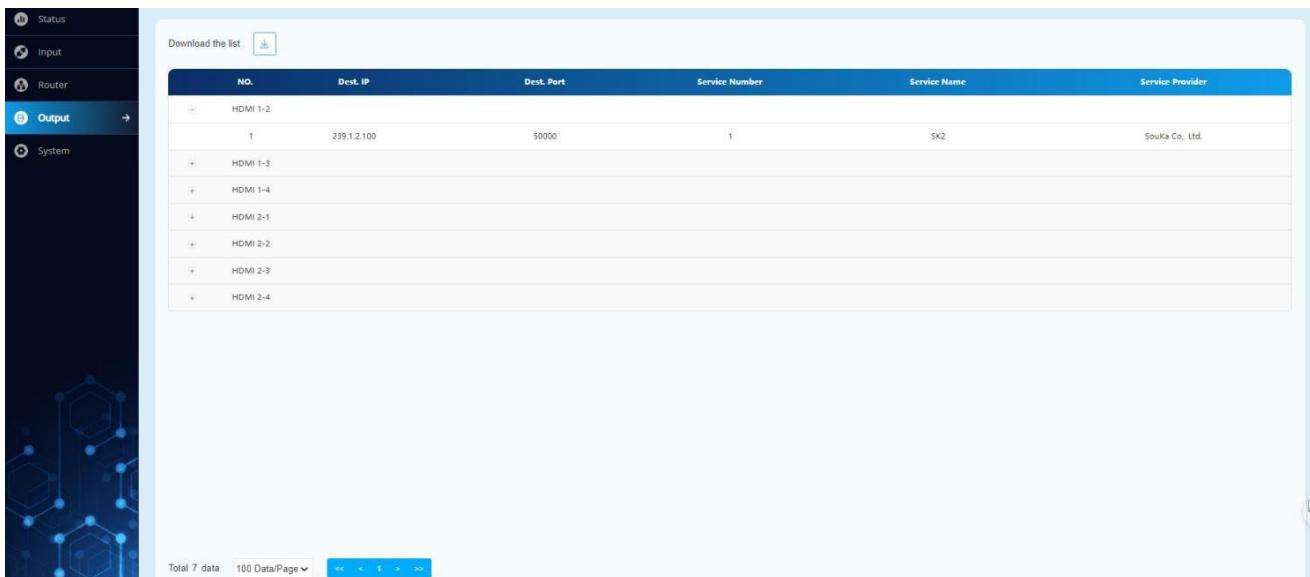


The screenshot shows a web-based management interface for the FINGER device. The left sidebar has icons for Status, Input, Router, Output (selected), and System. The main content area is titled 'Output' and shows a table of forwarded programs. The table has columns: NO., Dest. IP, Dest. Port, Service Number, Service Name, and Service Provider. The data shows 7 entries, with the first entry being 'HDMI 1-2' with Dest. IP 239.1.2.100, Dest. Port 50000, Service Number 1, Service Name SK2, and Service Provider SouKa Co., Ltd. There is a download button at the top of the table. At the bottom, there are buttons for 'Total 7 data', '100 Data/Page', and navigation arrows.

NO.	Dest. IP	Dest. Port	Service Number	Service Name	Service Provider
1	239.1.2.100	50000	1	SK2	SouKa Co., Ltd.
+ HDMI 1-3					
+ HDMI 1-4					
+ HDMI 2-1					
+ HDMI 2-2					
+ HDMI 2-3					
+ HDMI 2-4					


## 4.7. System

Able to perform network and IP input network port settings, password settings, system configuration, time settings and cloud network management binding.

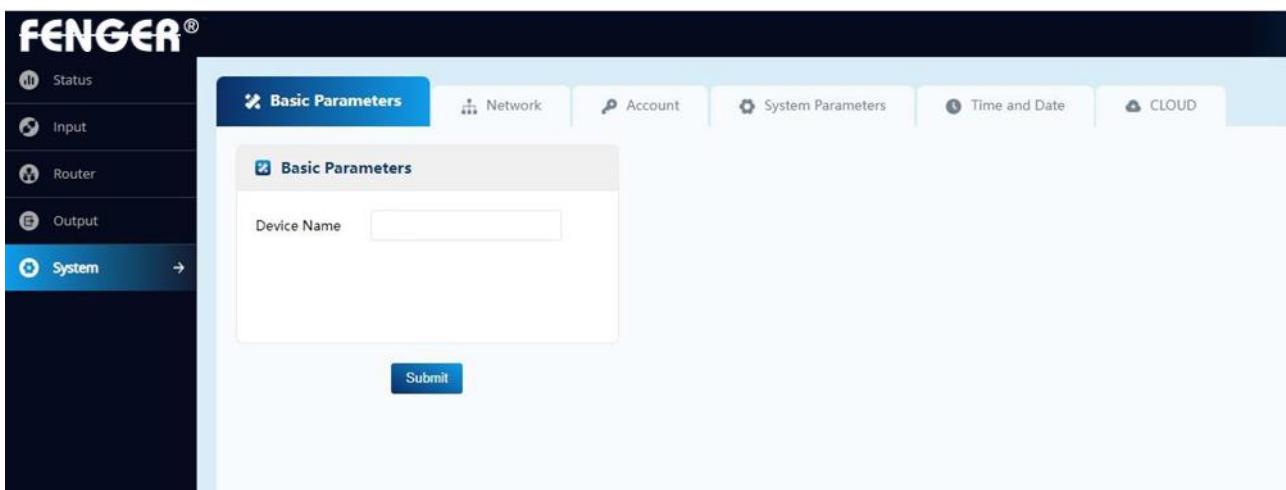

The screenshot shows the 'System' management interface. The left sidebar has icons for Status, Input, Router, Output, and System (selected). The main content area has tabs for 'Basic Parameters', 'Network', 'Account', 'System Parameters', 'Time and Date', and 'CLOUD'. The 'Basic Parameters' tab is active, showing a sub-form with a 'Device Name' input field and a 'Submit' button.

## 4.7.1. Basic parameters

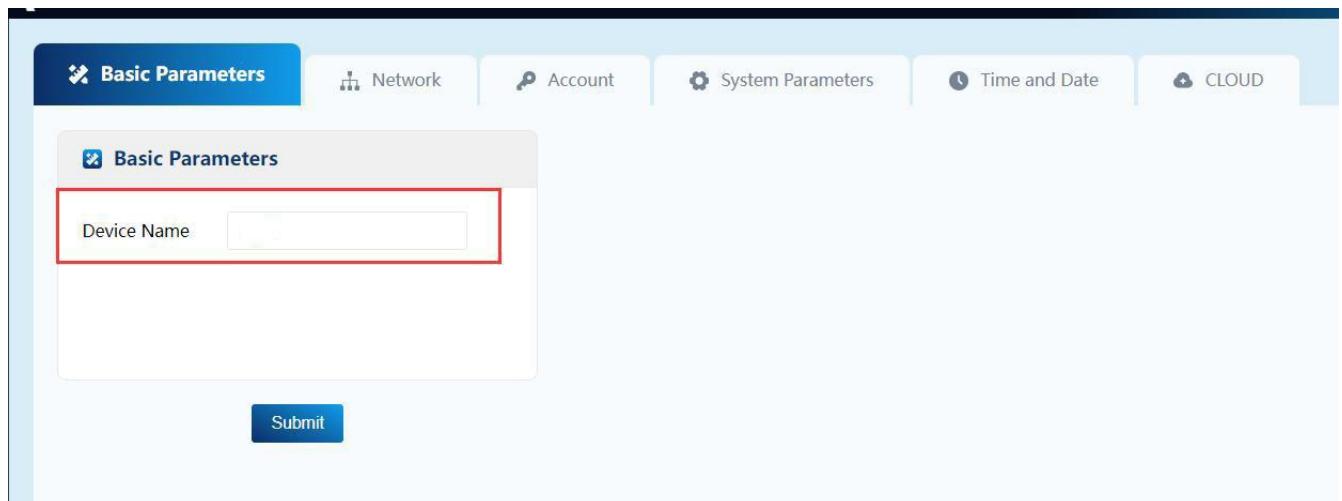


Basic Parameters

Device Name

Submit

## 4.7.2. Network

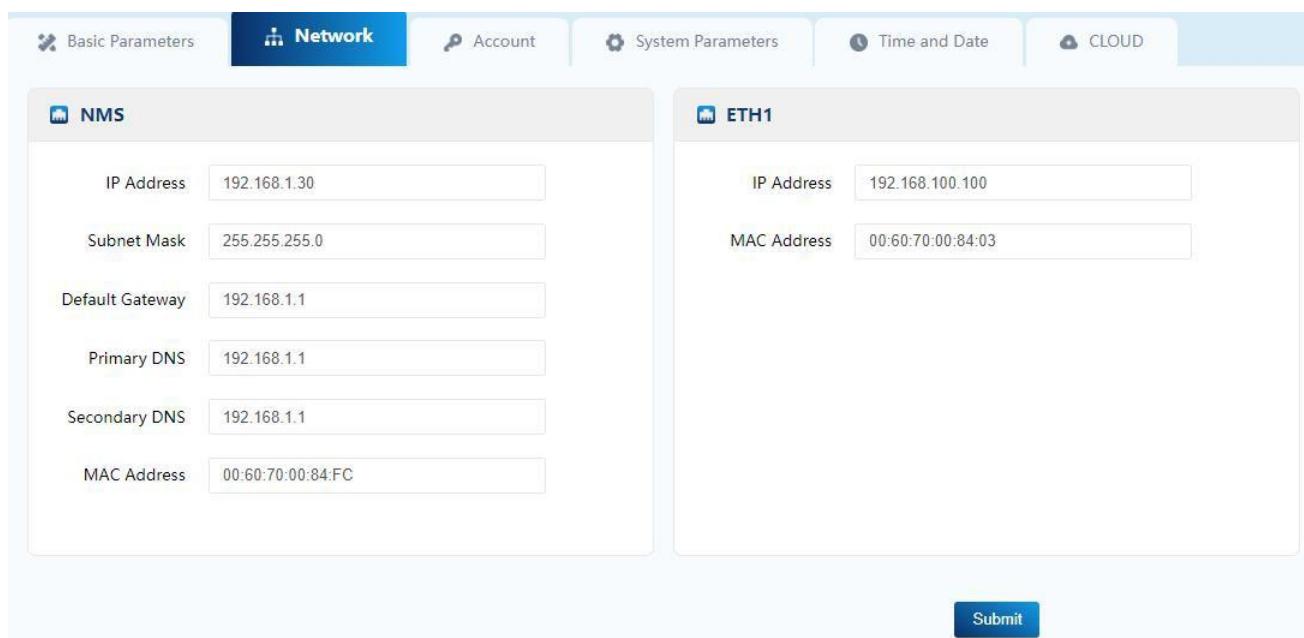

Basic Parameters Network Account System Parameters Time and Date CLOUD

NMS

IP Address: 192.168.1.30

Subnet Mask: 255.255.255.0

Default Gateway: 192.168.1.1

Primary DNS: 192.168.1.1

Secondary DNS: 192.168.1.1

MAC Address: 00:60:70:00:84:FC

ETH1

IP Address: 192.168.100.100

MAC Address: 00:60:70:00:84:03


Submit

Network	
NMS	Network management port, connected computers must be in the same network segment.
ETH1	Network port 1; fill in according to actual needs.

#### 4.7.3. Account

##### Reset a new username and password.

Operation steps: First fill in the username and password in the initial information, and then fill in the new username and password. Only when the initial username and password are entered correctly can the password be modified.

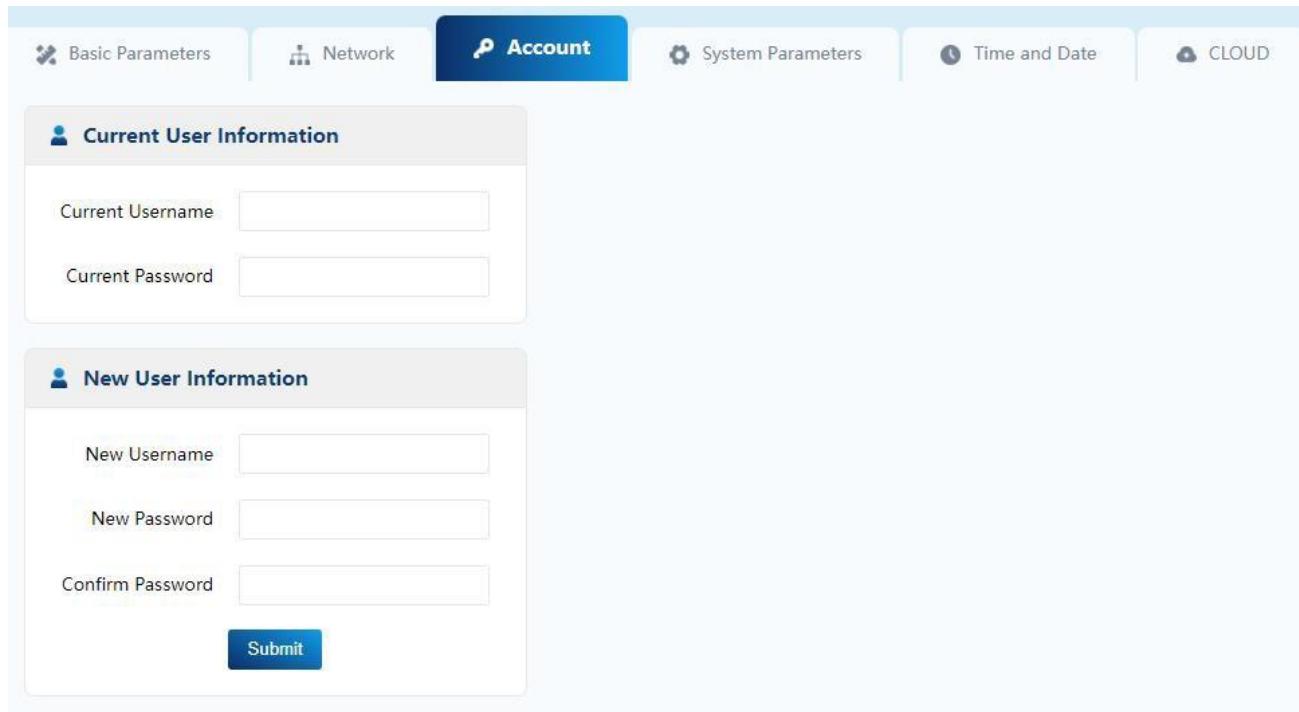

The screenshot shows the 'Account' tab selected in a navigation bar. The interface is divided into two main sections: 'Current User Information' and 'New User Information'.

**Current User Information:**

- Current Username:
- Current Password:

**New User Information:**

- New Username:
- New Password:
- Confirm Password:

**Buttons:**

- Submit: A blue button at the bottom of the 'New User Information' section.

#### 4.7.4. System parameters

In the system configuration, follow the operating instructions to upgrade the system, restore the factory, restart, export the system configuration file, and import the system configuration file. The import and export files can manually back up the system configuration information. When you need to restore the previous configuration information, import the corresponding configuration file is enough.

**System Parameters**

**Upgrade System from file**  
Click the Browse button below and import the upgrade file, then click the Upgrade button to upgrade the system. The device will automatically restart after the upgrade is completed.

**Restore to factory settings**  
Click the Restore button to reset the device to the Factory defaults. The device will automatically reboot when the restore is completed.


**Reboot**  
Click the Reboot button to reboot the device.

**Export Settings**  
Click the Export button, then the device will back up all the current settings into your computer.

**Import Settings**  
Click the Browse button below and load the configuration file, then click the Import button to apply the file. The device will automatically reboot when the restore is completed.


#### 4.7.5. Time and Date

It can automatically calibrate time information, or manually set the time and adjust the time zone according to actual needs.

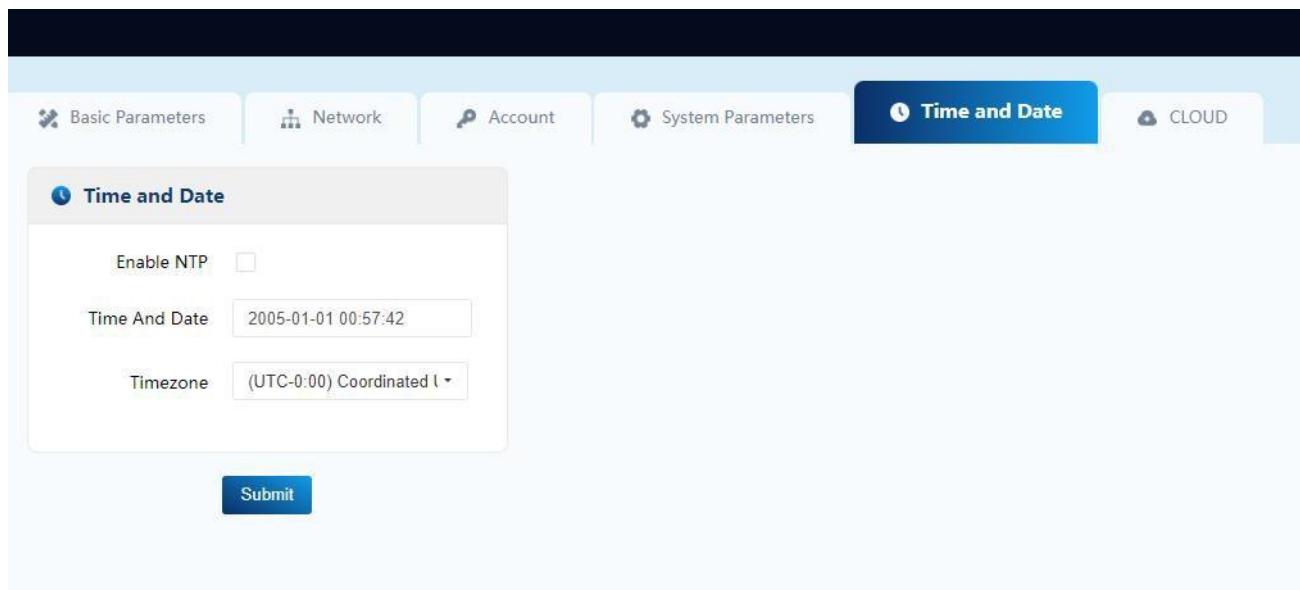

#### 4.7.6. Cloud

Please enter the cloud network management system account to bind the device. If you do not have an account, please register an account in the cloud network management system. Enter the cloud network management account and password to bind. After the binding is successful, the binding status light turns green.

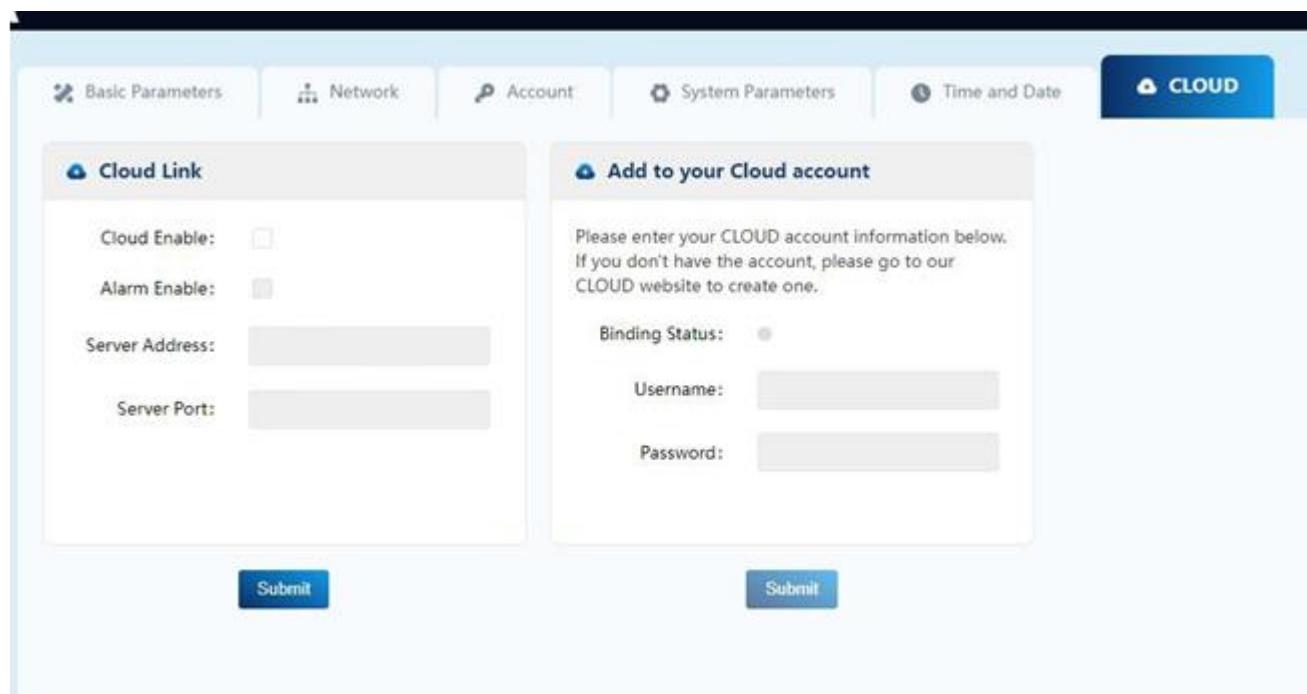

Cloud enable	Cloud network management is enabled, checked by default. After unchecking, the device will be disconnected from the cloud network management.
Alarm enable	Checked by default, device alarm information can be detected on the cloud network management.
Server address	Fill in the server domain name of the cloud network management.
Server port	Fill in the server port of the cloud network management.
Binding status	Green: Binding successful; Gray: Unbound.
Username	User name registered on the cloud network management system.
Password	Password registered on the cloud network management system.

## 5. Equipment operation precautions

The company's product quality assurance system includes equipment testing and operating procedure inspections to ensure the reliability of product quality. The company has taken all possible measures before the product leaves the factory. The optical, electrical and mechanical indicators of the products all meet national standards. During use, in order to prevent possible potential problems, the following precautions should be strictly followed for relevant operations.

### 5.1. Precautions

1. Place the device at an ambient temperature of 0~45°C. Other conditions meet the required scope of work.
2. Make sure the rear panel radiator is well ventilated and make sure all jacks are not blocked.
3. Check whether the power supply voltage is within the specified range and whether all connections are correct.
4. Check whether the adjustment level (dB) change is within its allowable range.
5. Check whether the connection of each signal line is loose.
6. Please do not switch machines frequently (the switching interval should be at least 10 seconds).

### 5.2. The chassis needs to be unplugged from the power supply

1. The power cord or socket is damaged.
2. If there is liquid injection equipment.
3. Any debris falls into the chassis hole, causing an internal short circuit.
4. Use water or soak.
5. Collision or internal damage.
6. Do not use this machine for a long time.
7. If the preset is restored and the power is turned on, the device still does not work properly.
8. Equipment needs maintenance.

### 5.3. Common malfunctions

1. Missing program: Please check whether there is a channel conflict, whether the video signal input is normal, and restart the device.

These terms are subject to change without prior notice, and we reserve the right of final interpretation. If you have any further questions, please contact our sales department directly.